

Firmware update


Information

To use the full range of functions, ensure that the inverter is updated to the current firmware version during commissioning. The firmware update can be performed online [Firmware Update - Online \(recommended\)](#) (recommended) or offline [Firmware Update - Offline](#).


Firmware Update - Online (recommended)

If the inverter has already been registered in Fronius Solar.web, the update can be started directly via Solar.web. Adding a PV system see [Add PV system to Solar.web](#).

- 1 Open [Fronius Solar.web](#).
- 2 Login with username and password.
- 3 Click on "Settings".

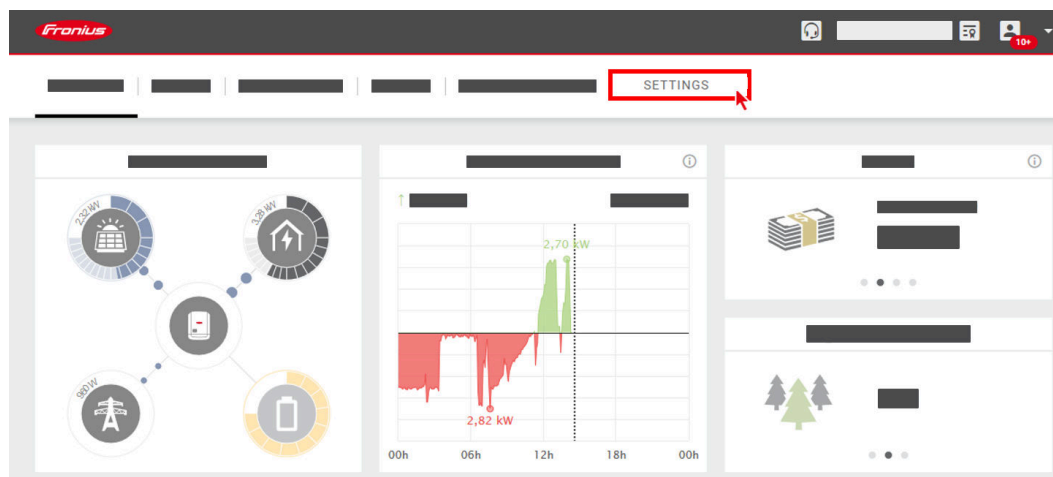

- 4 Click on "Components" (1).
- 5 Check for available firmware in the Update column (2).
Tick the checkbox (3) for the selected firmware.
- 6 Click on "Update" (4).

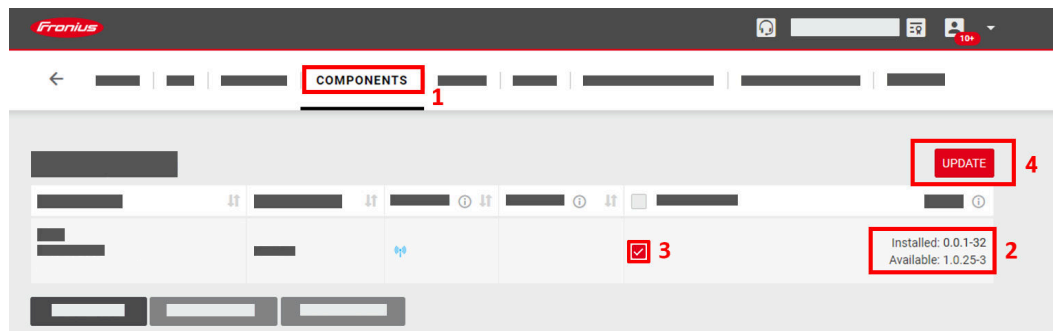


The update will be installed.


Firmware Update - Offline

All available updates are provided at www.fronius.com. After downloading the update, proceed as follows.


- 1 Open the inverter website (See [Installation using the web browser](#)).
- 2 Click on "System".

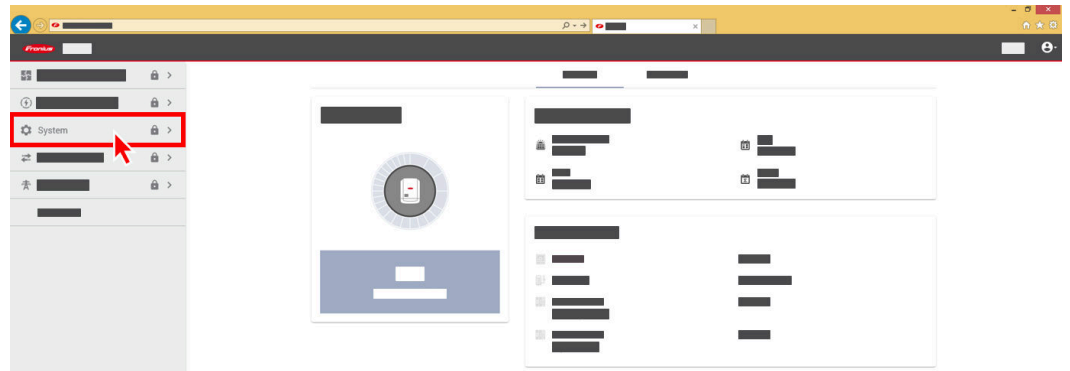

- 3 Enter the password for the user login and click on "Login".

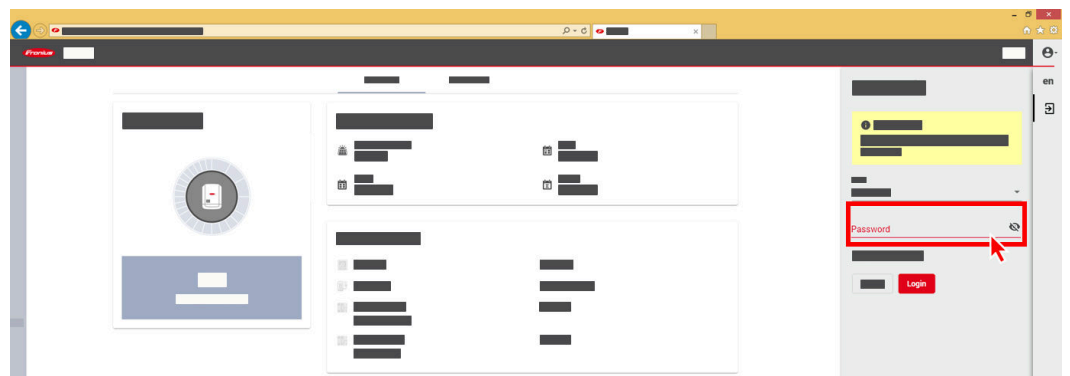

- 4 Click on "Update" (1).
- 5 Drag the firmware file into the "Drag&Drop file here" field or select it using "Browse file"

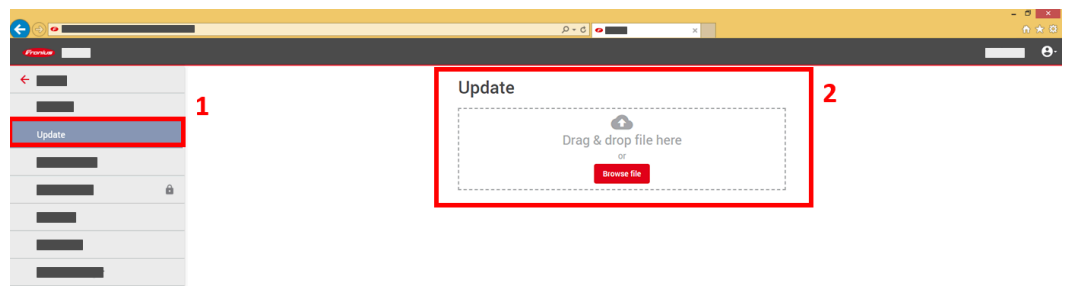

The update will be installed.